

Operating Instructions **Crêpe-maker Model „NOURI“** **order no. 126-1045**

1. General information

- Carefully read these operating instructions through as they contain important information for the safe and correct use of the crêpe maker.
- It is advisable to keep the operating instructions in a place where you have them always ready to hand.
- Should you pass the appliance on to a third party, these operating instructions must be handed on.
- As soon as you have unpacked the appliance, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- Dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc..) must not be left within reach of children, in that they are potential sources of danger.
- The appliance must only be used for the intended purpose. Improper use can cause damages and lead to the loss of the warranty. Do not use the crêpe-maker outdoors.
- In the case of fault and/or malfunction, switch the appliance off. Pull the power plug and inform your dealer. He will carry out the repair with original spare parts.
- Please observe the local regulations concerning accident prevention and disposal.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, oven safety is no longer guaranteed.

2. Safety notes

- Before you connect the appliance, make sure that the tension indicated on the identification plate agrees with the tension on your electricity mains. Other types of current can lead to the overheating of the appliance.
- Do not touch the plug with moist or wet hands.
- Regularly check the cable and the plug. If something is damaged, it must be replaced by a qualified specialist.
- Never do attempt to repair the appliance by yourself.
- The cable must not hang over table edges and/or sharp edges. It also must not come into contact with the hot appliance or with water. Pull the cable only at the plug from the plug socket.
- When positioning the electrical cable, make sure that it doesn't present a trip hazard during use of the appliance.
- Place the appliance on a flat and heat-resistant surface and at least 20 cm far a way from walls and from objects sensitive to heat. The appliance should not stand in the proximity of open flames (p. e. gas ovens) or reach of children.
- Do not leave the crêpe maker unattended while it is in use. Children are not able to realise dangers when handling electronic appliances.
- Do not touch the hot plate.
- Do not use steel wool for the plate, because it is Teflon coated.
- The appliance must not be put into water or hosed with water.
- Before each cleaning switch off the appliance and pull out the plug from the plug socket.

3. Start-up and operation

A = Thermostat and on-off switch
B = Thermostat lamp (green)
C = Energy inlet lamp



- After removing the packing material, clean the appliance with a moist rag and dry everything well.
- Clean the cooking plate with a cotton rag and some oil, because it is more careful as for example household paper.
- Put the plug into the plug socket.
- Switch on the appliance (toggle A). The yellow control lamp © lights up.
- With this toggle you select also the desired temperature, beginning with 1 (approx.. 50°C) and ending with 6 (approx.. 300°C), thus in steps of approx. 50°C. If you turn the switch between 1 and 2, then the baking surface reaches approx. 80°C. The ideal baking temperature is 275°C.
- As soon as you have set the temperature, the green control lamp (B) lights up.
- During short idle periods, do not turn off the appliance, but turn the toggle (A) between 1 and 2 (standby), thus approx. 80°C.
- Turn the thermostat toggle (A) on ZERO after completion of the crêpe baking. Thereby you switch off the appliance.

4. Cleaning and maintenance

- First allow the appliance to cool.
- Pull the plug from the plug socket.
- Clean the housing with a soft moist rag and a mild cleaning detergent.
- The cooking plate has a Teflon coated surface and does not need a special cleaning. Wipe it with a rag and some oil after each baking procedure.
- Do not use chemical cleaning agents and scrubbing sponges.
- **Warning: Never clean the appliance with water.**

5. Technical data

| | |
|-------------------------------|-------------------------------------|
| Thermostat | 50° - 300°C |
| Protection class | IP 21 |
| Heating plate (Teflon coated) | Ø 400 mm |
| Height of the appliance | 210 mm |
| Power connection | 220-240 Volt / 50 Hz / 1 Ph./3,2 kW |