

Operating Instructions

Bain-Marie Model ECO 160

Order no. 343-1000



1. General information

- Carefully read these operating instructions through as they contain important information.
- It is advisable to keep the operating instructions in a place where you have them always ready to hand.
- Should you pass the appliance on to a third party, this instruction manual must also be handed over.
- As soon as you have unpacked the Bain-Marie, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- The Bain Marie must only be used for the intended purpose. Improper use can cause damages and lead to the loss of the warranty.
- Before you connect the Bain-Marie, make sure that the type of current stated on the identification plate corresponds with your mains power supply.
- In case of fault and/or malfunction, pull the plug out of the socket and inform your dealer. He will carry out the repair with original spare parts.
- Please observe the local regulations concerning accident prevention and disposal.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions.

2. Safety notes

- The Bain Marie may be only used, if water were filled into the interior before.
- Do not immerse the appliance in water or any liquid.
- Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.
- The cable must not hang over table edges and/or sharp edges.
- It must not come into contact with water.
- Do not use the cable to pull out the plug from the socket.
- Do not touch the plug with wet hands.

- Repairs may only be undertaken by a qualified specialist using original spare parts.
- Do not leave the appliance unattended while it is in use. Children are not able to realise dangers when handling electronic appliances.
- Before each cleaning, switch off the appliance and allow it to cool down. Then pull the plug out of the socket.
- Do not touch hot surfaces.
- Do not move the Bain-Marie when hot water is in it.
- Before each cleaning unplug from outlet and also when not in use.

3. Instruction for use and cleaning

1. Place the appliance on a stable, flat and dry surface.
2. Before using clean the appliance with a damp cloth or sponge and a commercial detergent. Wipe off and dry everything carefully.
3. Add water into the interior about 2 cm till maximum 5 cm.
4. Connect the appliance with the power supply. The control lamp will illuminate.
5. Adjust the desired temperature with the toggle.
6. The heating-up time depends on the water temperature and can take a half hour.
7. Place the GN container into the Bain Marie.
8. If you turn the toggle on ZERO, the Bain Marie is switched off.
9. If there is any food residue remaining on the surface, it should be removed after each use.
10. It is essential to have the appliance cleaned on a daily basis.
11. Before each cleaning, switch off the appliance and allow it to cool down. Then pull the plug out of the socket.
12. Clean the surface with a damp, warm cloth and detergents, that are suitable for the appliance.
13. Do not use aggressive detergents and under no circumstances steel wool or abrasive sponges.

4. Technical Data

- For 1/1 or 2 x 1/2 or 3 x 1/3 GN pans
- GN pan depth up to 150 mm
- Seamless upper rim
- Deepdrawn inner tank
- Adjustable thermostat and indicator lamp
- Delivery without GN pans
- Inner dimensions: D 510 x W 305 x H 160 mm
- Outer dimensions: D 535 x W 325 x H 240 mm
- Power connection :230V / 1 Ph/ 1,2 kW