



info@saro.de

Operating instructions Wine cooler

Model WKS96

(Order no. 325-2155)




CONTENTS

Introduction.....	1
Parts.....	1
Using Your Wine Cooler.....	2
Important Safeguards.....	2
Operation Instructions.....	3
Temperature Control.....	3
Cleaning and Care.....	4
Troubleshooting.....	4
Serving Wines/Temperature Chart.....	5
Technical and other information.....	6
Declaration of conformity.....	6

INTRODUCTION

- Approximately 96-bottles storage capacity.
- Different wines are served at different temperatures (Service). Most wines however should be stored close to 13° C for preservation (Storage). This unit can be used for Storage and/or Service. The unit has a glass door, and soft interior light that you can leave on or turn off to elegantly display your wine.

PARTS

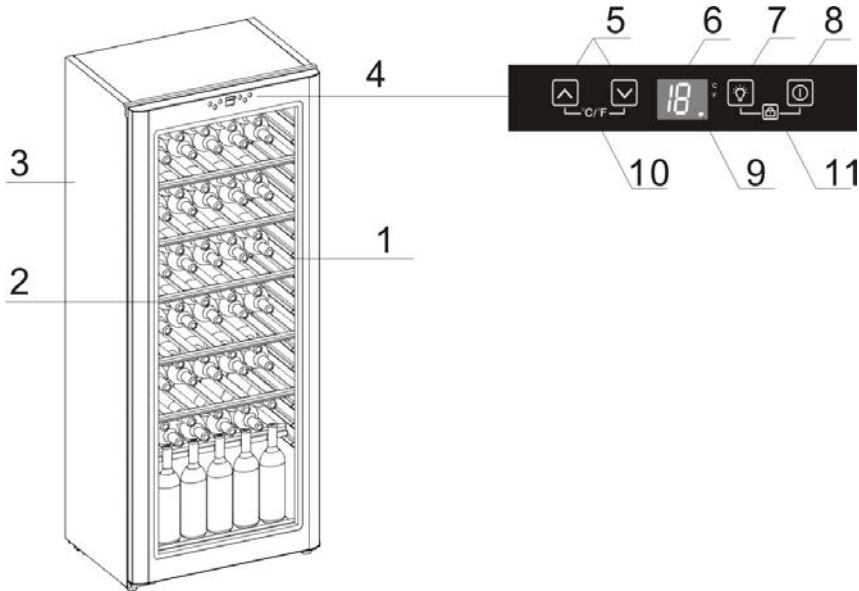

1. Double-pane window
2. Shelf
3. Cabinet
4. Touch control screen
5. Temperature Adjustment
6. LED Display
7. Light
8. Power
9. Function Indicator
10. °C/°F Switch
11. Lock / Unlock

USING YOUR WINE COOLER

Remove all packaging and any promotional labels or stickers from your wine cooler. Be sure that all parts (listed above) of your new wine cooler have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Before using your Wine Cooler for the first time, remove all protective paper and wrapping. Wipe housing and internal chamber with a damp cloth to remove any dust.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and personal injury.

1. Use this appliance only as described in this manual. Other users are not recommended, as it may cause fire, electric shock or personal injury.
2. This product is intended for household and commercial use.
3. To protect against electric shock, do not immerse unit, plug or cord in water or other liquids.
4. Keep away from children.

5. Unplug from the outlet when not in use, when moving from one location to another or before cleaning.
6. To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull by the cord.
7. Do not operate the appliance in the presence of explosive and/or flammable fumes.
8. Do not place the appliance or any of its parts near an open flame, cooking or other heating appliance.
9. Do not operate the appliance with a damaged cord or plug. If the product malfunctions, or if it is dropped or damaged in any manner, do not use.
10. The use of attachments is not recommended and may be hazardous.
11. Place the unit on a dry level surface.
12. Do not operate if the housing is removed or damaged.
13. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
14. This appliance is designed to be built-in (fully recessed) or free standing.
15. The wine cooler is intended for use in a controlled ambient location such that the ambient temperature does not exceed 32°C (90°F) .
16. Locate the unit away from direct sunlight and sources of heat (stove, heater radiator, etc.). Direct sunlight will affect/alter the outside color of the appliance.

WARNING: To reduce the risk of fire, electric shock or personal injury, unplug or disconnect the appliance from the power supply before servicing.

OPERATING INSTRUCTIONS

1. Place your wine cooler on a flat surface that is strong enough to support the unit when fully loaded.
2. This wine cooler is designed to be free standing.
3. Do not place heavy objects on top of the unit.
4. Do not place the unit in a moist place or display in direct sunlight.
5. Do not place the unit next to a major appliance that emits large amounts of heat, such as a dishwasher, microwave, toaster oven, oven or barbecue, etc.
6. Do not plug unit into the same outlet as a refrigerator or microwave.
7. The unit's cooling system operates efficiently with an ambient temperature of less than 32°C (90°F). Do not install in a garage or basement.
8. Determine the best setting to use: refer to the temperature guides for appropriate serving. An easy reference guide for serving temperatures is also found on the inside door.
9. Place bottles inside the cooler.
10. Plug the power cord into a standard electrical outlet.

Important: When using the wine cooler for the first time, allow at least 24 hours for the internal temperature to adjust properly, Make sure there are at least 3 to 5 bottles in the unit.

ALWAYS REMOVE ALL BOTTLES BEFORE MOVING THE WINE COOLER

TEMPERATURE CONTROL

Important note: In order to operate efficiently, thermoelectric products should be in an environment with an ambient temperature of less than 32°C (90°F).



Setting the temperature control (presets):

For your convenience, the wine cooler is programmed at storing temperature. The temperature pre-set by the manufacturer is 13°C (55°F), which the indicator will display. To change the preset temperature in the wine cooler, simply press the Preset button until the desired number appears.


Setting the temperature control (manually);

The new touch control screen design, in order to prevent accidental contact, the design adds the lock and °C/°F Switch function. After finishing the temperature regulation, press the °C/°F Switch function


°C/°F for 3 seconds,click to °F, click again to °C.


You can manually adjust the temperature. Simply press  button on the control panel to decrease the temperature and the  button to increase the temperature inside the wine cooler.


The temperature range is from 5°C (40°F) to 18°C (65°F).

After finishing the power and temperature and light regulation, press the lock function keys , click to lock, click again to unlock.

The appliance is with Silent Mode, which will slow down the fans speed when the inside temperature reaches the temperature set.

The Silent Mode is set as "On" by default, to turn off it, when the control panel is under locked condition, press and hold the light mark  for 3 seconds, the icon °C or °F will stay on to indicate the Silent Model is off.

To turn on Silent Mode again, when the control panel is under locked condition, press and hold the light mark  for 3 seconds, the icon °C or °F will flash continuously to indicate the Silent Model is work

When the compressor starts to work, the Indicator  will stay on; In other conditions, the Indicator will be off.

CLEANING AND CARE

Always unplug the wine cooler before cleaning. Do not use benzene, scrubbing brushes or chemical cleaners as these will damage the unit. Use only a mild, nonabrasive cleanser to clean the exterior of the cabinet. Clean the stainless steel door and handle by wiping with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water. Wash the racks with a mild detergent solution.

Always dry all the parts with a clean dry cloth before plugging the wine cooler back into the receptacle.

TROUBLESHOOTING

You can easily solve many common problems by trying the suggestions below.

SYMPTOM	POSSIBLE CAUSE
Vibrations	<ul style="list-style-type: none"> • Check to make sure the wine cooler is on a level surface.
The door will not close properly.	<ul style="list-style-type: none"> • The wine cooler is not on a level surface. • The racks are out of position. • The bottle is too long.
Unit has no power.	<ul style="list-style-type: none"> • Check the wall outlet for power. Make sure the outlet is not controlled by a wall switch.
The inside temperature does not seem correct.	<ul style="list-style-type: none"> • Make sure the cooling vents are not obstructed. • The room may be too hot. Example: if the ambient temperature is 90°F(32°C) or higher, the unit can have difficulty chilling adequately on the white wine setting. • When using the unit for the first time, it can take the unit up to 24 hours to reach the desired temperature.
The unit does not operate.	<ul style="list-style-type: none"> • It may not be plugged into the wall socket. • Make sure the wall socket it functional by testing another electrical appliance in the power socket.
The unit will not cool.	<ul style="list-style-type: none"> • Make sure there are at least 3 to 5 bottles

Power is On.	<p>in the unit. Allow at least 24 hours for the internal temperature to adjust properly. What is the temperature of the room? If the room temperature is above 90°F(32°C), the unit will not get below 51°F(11°C). Humidity does not affect the cooling ability of the unit.</p> <p>To achieve accurate temperature control, the unit should not be used or operated in any of the following locations:</p> <ul style="list-style-type: none"> • In a sunny place • In a room with poor air circulation such as a garage near another heat-producing appliance(dishwasher,oven, refrigerator). • With an outlet shared with a refrigerator, as the refrigerator will drain power from the wine cooler. • In a cabinet or closet. <p>Make sure the cooling vents are not obstructed.</p>
General Statements	<p>The unit can be manually set using the + and - symbols. The minimum setting is 48°F(9 °C) and maximum is 18°C (65°F). The unit uses about as much energy as LED board.</p>

SERVING WINES

Storing wines at the proper temperature is important. To preserve them as long as possible generally wine should be stored at 55° Fahrenheit/13° Celsius. However the chart below suggests the optimal drinking temperature for the different styles of wine.

°C	°F	Wine Style
19	66	Armagnac, Brandy, Cognac
18	64.5	Full Bodied Red wines, Shiraz
17	62	Tawny Port
15	59	Medium Bodied Red Wines
14	57	Amontillado Sherry
13	55.5	Light Bodied Red Wines
12	53.5	Full Bodied White Wines
11	52	Medium Bodied White Wines
10	50	Rosé, Light Bodied White Wines
9	48	Vintage Sparkling
8	53.5	Fino Sherry
7	44.5	Non Vintage Sparkling

Technical and other information

Wine cooler

Model: WKS96
Order No.: 325-2155
Content (inner pot): 315 litres
Pack out 96 bottles

Materials:

Cabinet Powder coated
Door frame Aluminium
Shelves 7 pcs wooden shelves
Thermostat Digital
Illumination With blue LED
Inner liner Plastic

Refrigerant R600a/42g



Unit weight: 95 kg (net), 100 kg (gross)
Unit dimensions: B 605 x D 594 x H 1552 mm
Connection: 230V / 1Ph. / 50 Hz

Manufactured for:

Saro Gastro-Products GmbH
Sandbah 6

46446 Emmerich am Rhein - GERMANY
Tel: +49 (0)2822-9258-0 Fax: +49 (0)2822 18192
Email: info@saro.de Internet: www.saro.de

Declaration of conformity

The device complies with the current standards and directives of the EU.
If necessary we provide you with the corresponding declaration of conformity.

WR96170223SA-V0